HOME
DECORATORS
COLLECTION

BF-24644 OXFORD HUTCH 56″W WITH 2 DRAWERS

INV#05079

ASSEMBLY INSTRUCTIONS

Made In China

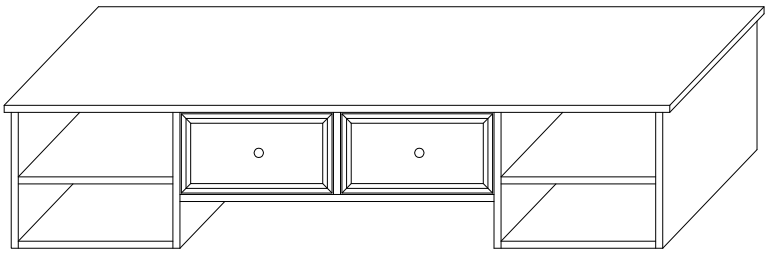

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware and then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B  BOTTOM PANELS-2PCS	C  LEFT SIDE PANEL-1PC
D  RIGHT SIDE PANEL-1PC	E  LEFT STAND PANEL-1PC	F  RIGHT STAND PANEL-1PC
G 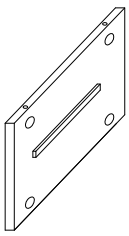 SMALL STAND PANEL-1PC	H  LARGE BACK PANEL-1PC	I  SMALL BACK PANELS-2PCS
J 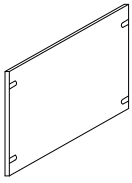 SHELVES-2PCS	K 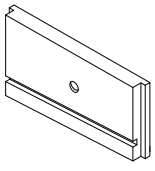 DRAWER PANEL FRONTS-2PCS	L 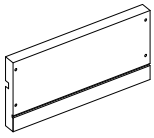 LEFT DRAWER PANEL SIDES-2PCS

M 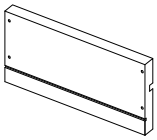 RIGHT DRAWER PANEL SIDES-2PCS	N 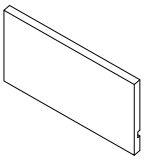 DRAWER PANEL BACKS-2PCS	O  ACROSS PANEL-1PC
P 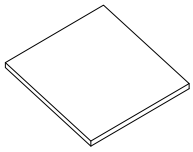 DRAWER PANEL BOTTOMS-2PCS	Q  CAM-BOLTS-24PCS	R CAM-LOCKS-24PCS
S 6mm × 1"  SCREWS-16PCS	T 7mm × 5/8" SCREWS-18PCS	U  SHELF SUPPORTS-8PCS
V KNOBS-2PCS	W CAM-TOOL-1PC	X 8mm × 5/8" SCREWS-2PCS
Y EVA MATS-8PCS	Z DOWELS-2PCS	A1  CONNECTED HARDWARES-2PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

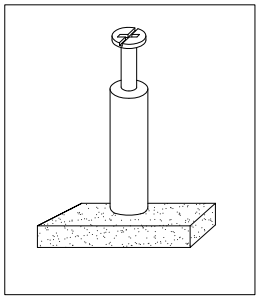

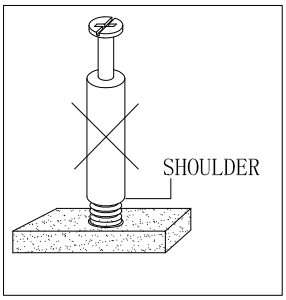

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

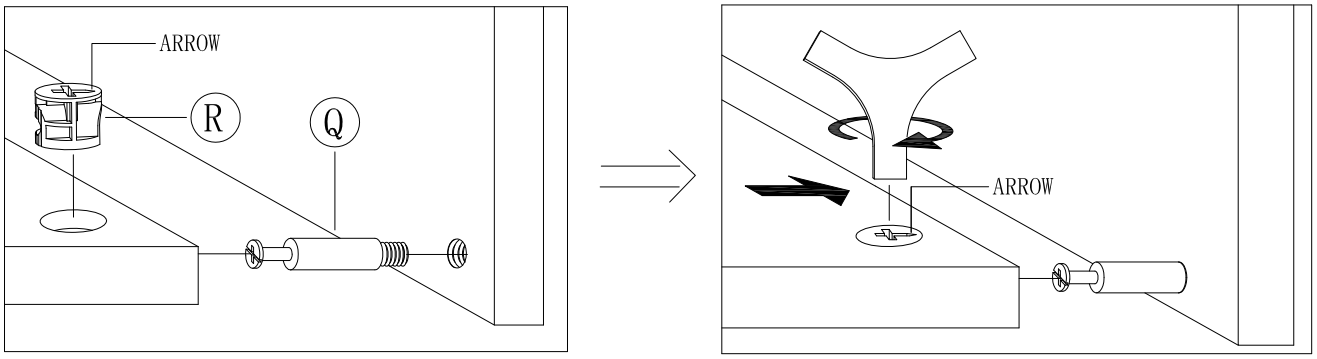

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

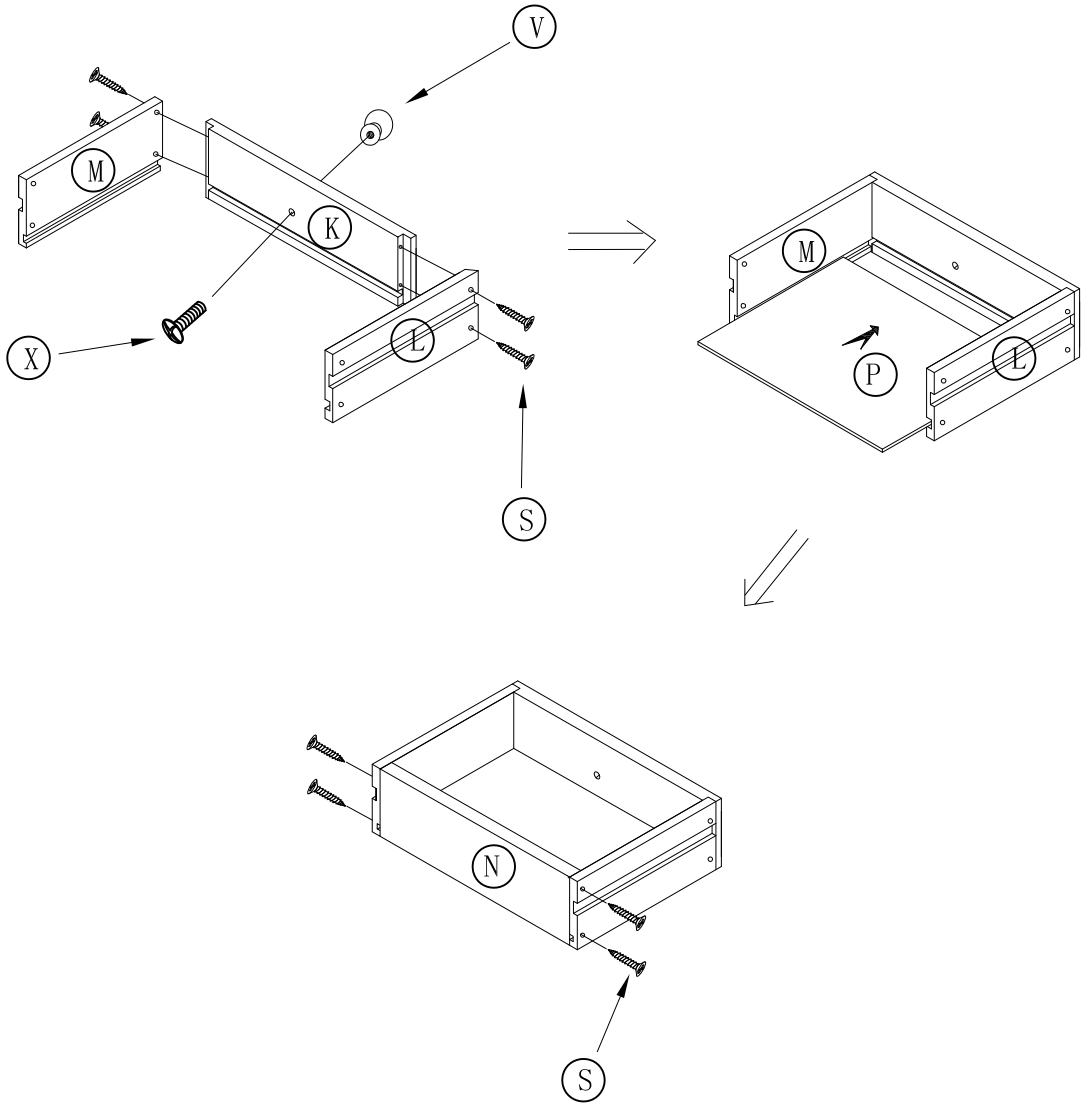

1). ASSEMBLE THE DRAWER.

- ATTACH DRAWER SIDE PANELS(L/M) USING 4 SCREWS(S).
- ATTACH THE KNOB(V) TO DRAWER PANEL FRONT(K) USING SCREWS(X).
- INSERT THE DRAWER PANEL BOTTOM(P) INTO THE SLOTS IN THE DRAWER PANEL SIDES(L/M).
- ATTACH DRAWER PANEL BACK(N) BETWEEN LEFT DRAWER PANEL SIDE(L) AND RIGHT DRAWER PANEL SIDE(M) USING 4 SCREWS(S).

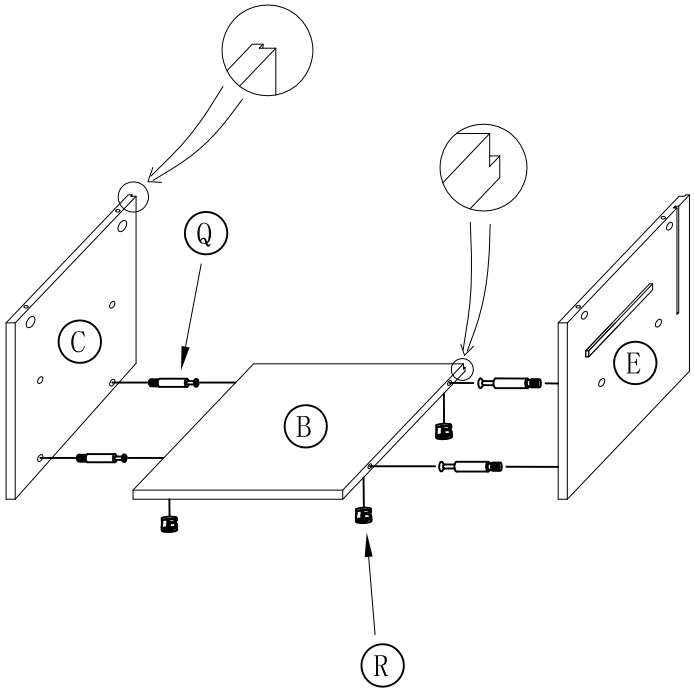

2). ASSEMBLE THE LEFT SIDE/STAND PANEL(C/E).

- ROTATE THE 4 CAM-BOLTS(Q) INTO THE HOLES IN THE LEFT SIDE/STAND PANEL(C/E).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(B) AND ATTACH USING 4 CAM-LOCKS(R).

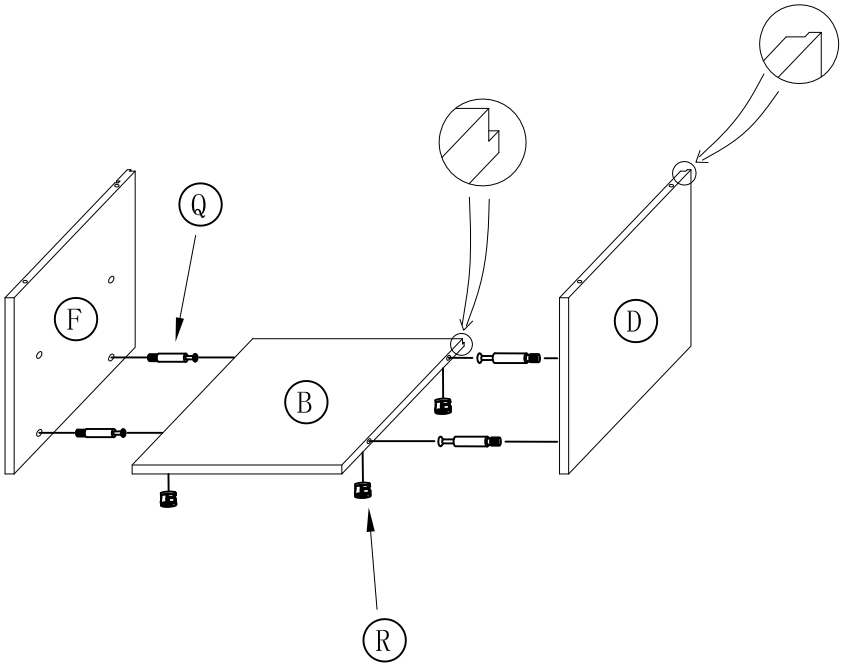

3). ASSEMBLE THE RIGHT SIDE/STAND PANEL(D/F).

- ROTATE THE 4 CAM-BOLTS(Q) INTO THE HOLES IN THE RIGHT SIDE/STAND PANEL(D/F).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(B) AND ATTACH USING 4 CAM-LOCKS(R).

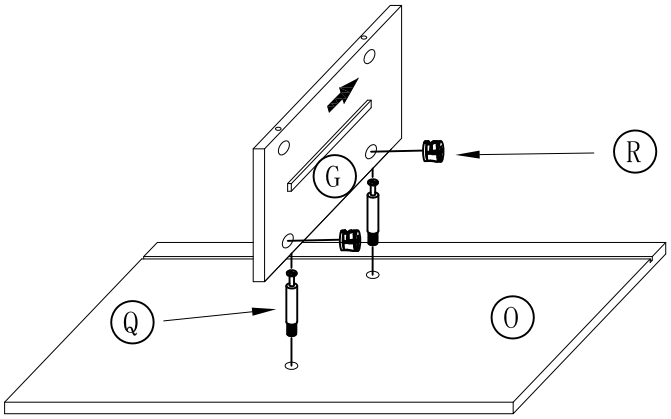

4). ASSEMBLE THE SMALL STAND/ACROSS PANEL(G/O).

- ROTATE THE 2 CAM-BOLTS(Q) INTO THE HOLES IN THE ACROSS PANEL(O).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(G) AND ATTACH USING 2 CAM-LOCKS(R).

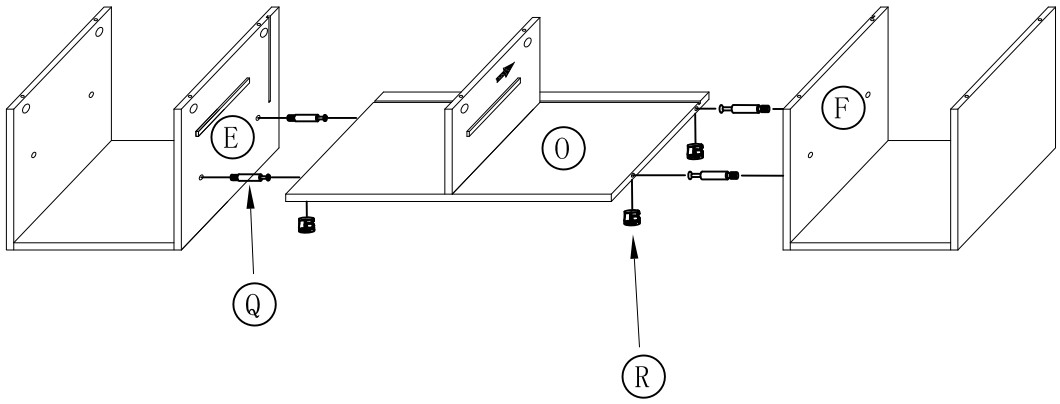

5). ASSEMBLE THE ACROSS PANEL(O).

- ROTATE THE 4 CAM-BOLTS(Q) INTO THE HOLES IN THE STAND PANELS(E/F).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANEL(O) AND ATTACH USING 4 CAM-LOCKS(R).

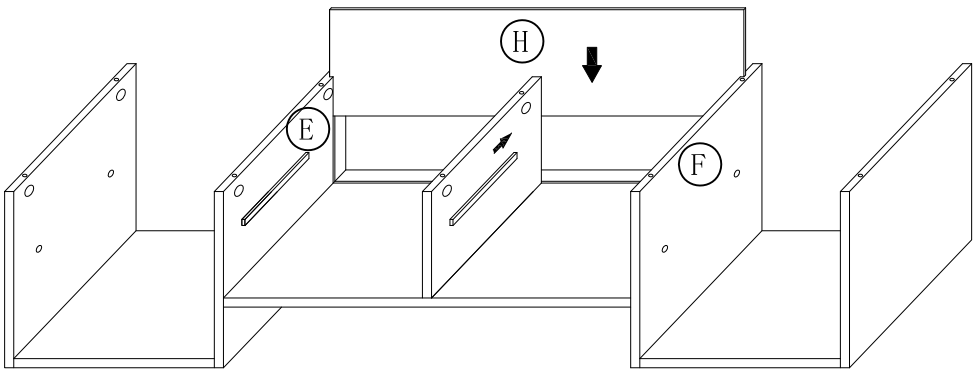

6). ASSEMBLE THE SMALL BACK PANEL(H).

- INSERT THE LARGE BACK PANEL(H) INTO THE SLOTS IN THE STAND PANELS(E/F).

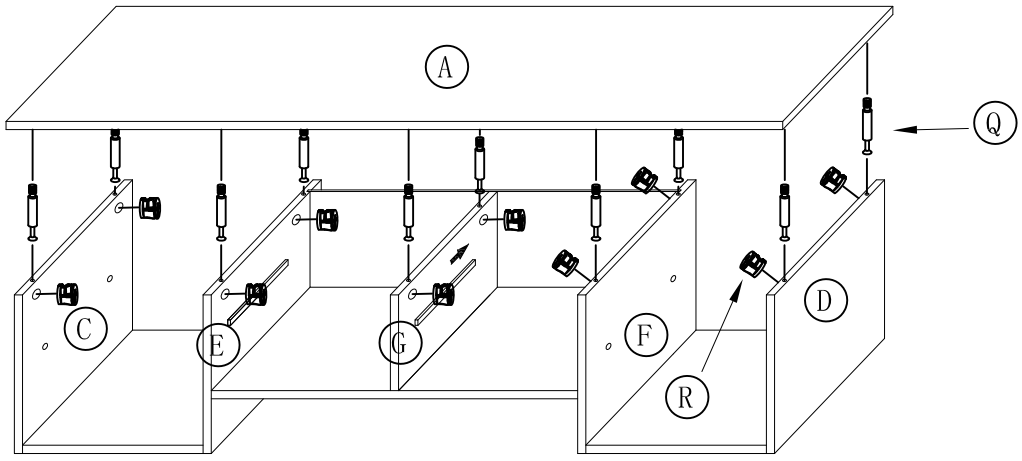

7). ASSEMBLE THE TOP PANEL(A).

- ROTATE THE 10 CAM-BOLTS(Q) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(Q) INTO THE HOLES IN THE PANELS(C/D/E/F/G) AND ATTACH USING 10 CAM-LOCKS(R).

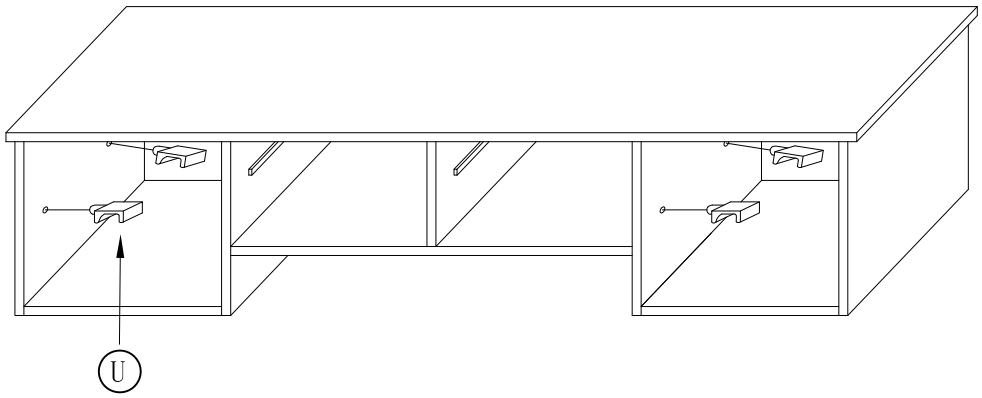

8). ASSEMBLE THE SHELF SUPPORTS(U).

- INSERT 8 SHELF SUPPORTS(U) INTO THE HOLES IN THE PANELS(C/D/E/F).

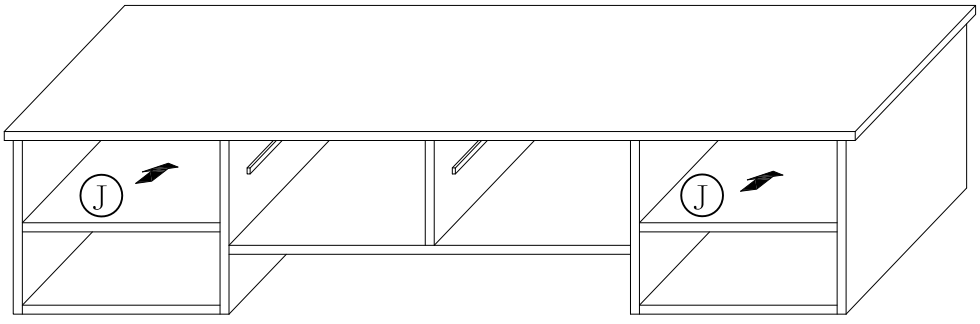

9). ASSEMBLE THE SHELVES(J).

- PLACE THE SHELVES(J) ONTO THE SHELF SUPPORTS(U).

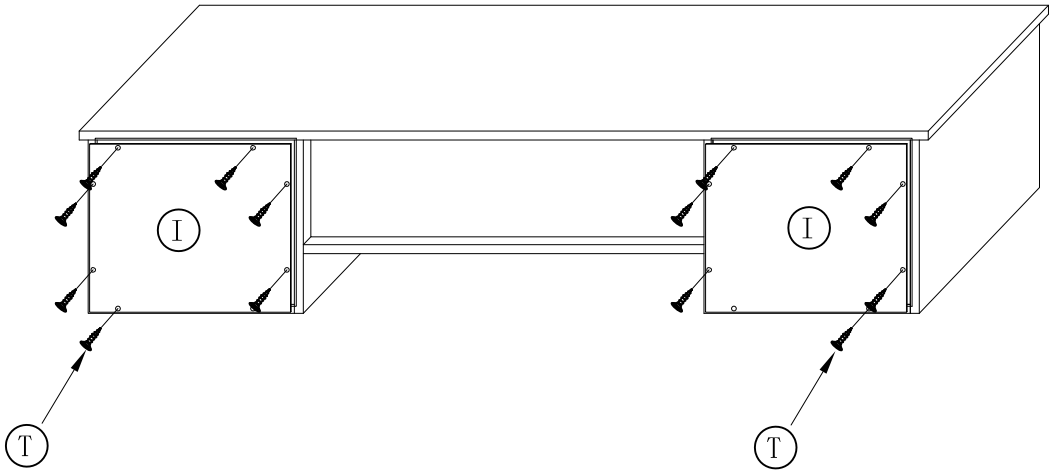

10). ASSEMBLE THE BACK PANEL(I).

- ATTACH 2 SMALL BACK PANEL(I) USING 14 SCREWS(T).

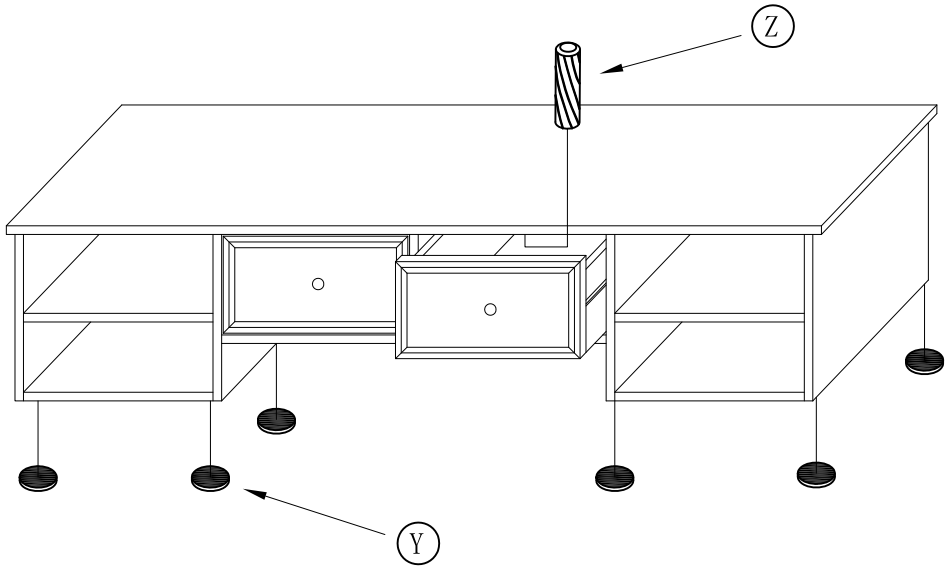

11). ASSEMBLE THE DRAWER AND EVA MATS(Y).

- ATTACH THE 8 EVA MATS(Y) TO BOTTOM PANEL(B).
- INSERT 2 DRAWERS TO THE SLIDERS.
- INSERT 2 DOWELS(Z) INTO THE HOLES IN THE TOP PANEL(A).

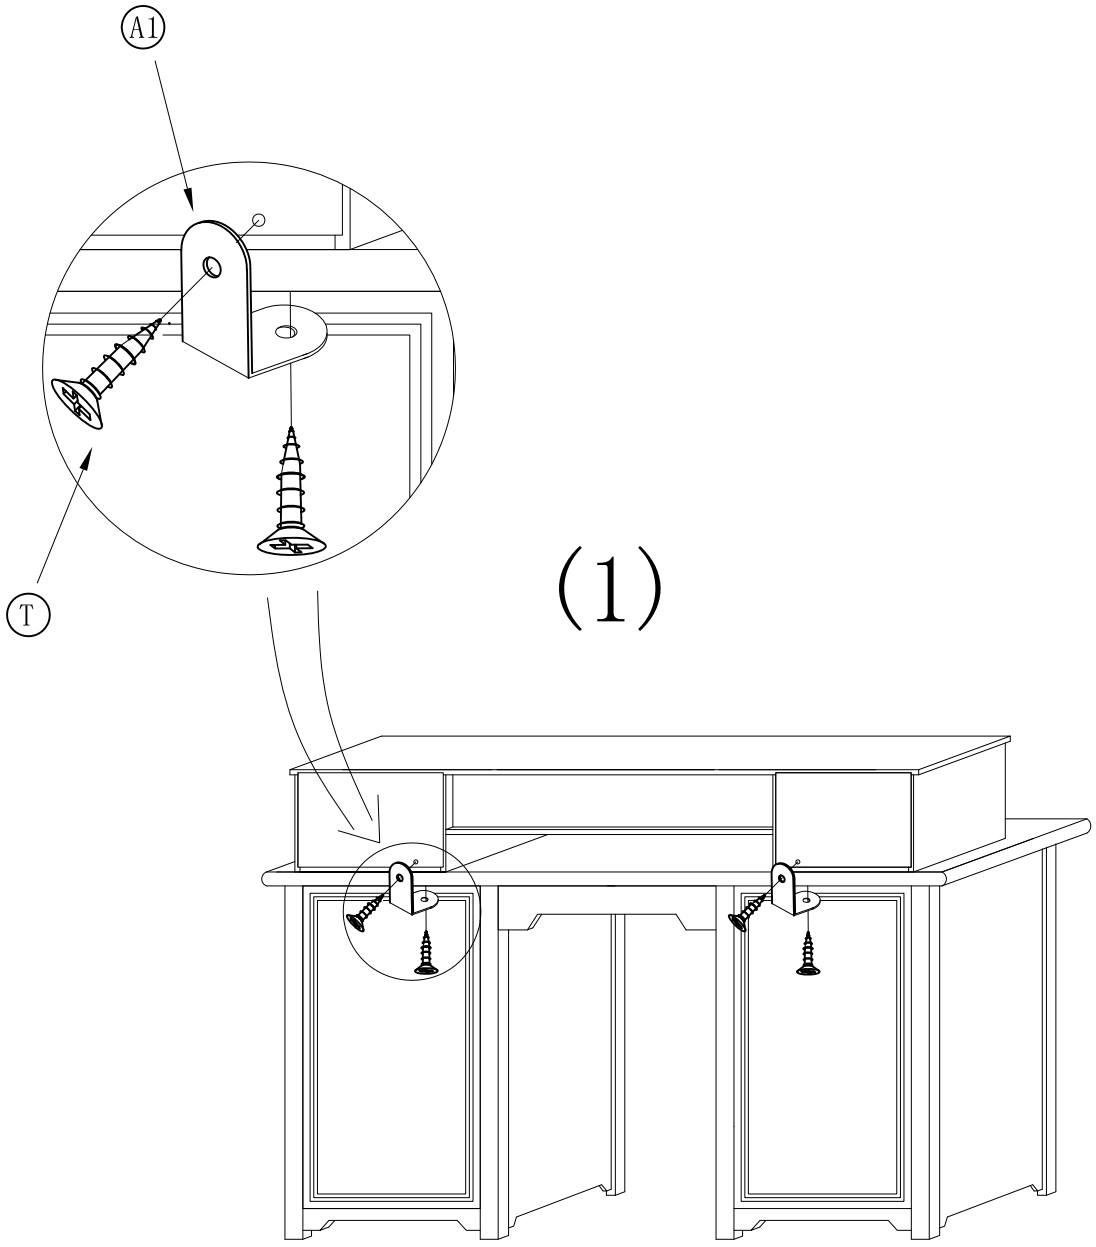

ASSEMBLE THE CONNECTED HARDWARES(A1).

- ATTACH 2 CONNECTED HARDWARES(A1) USING 4 SCREWS(T).

(2)

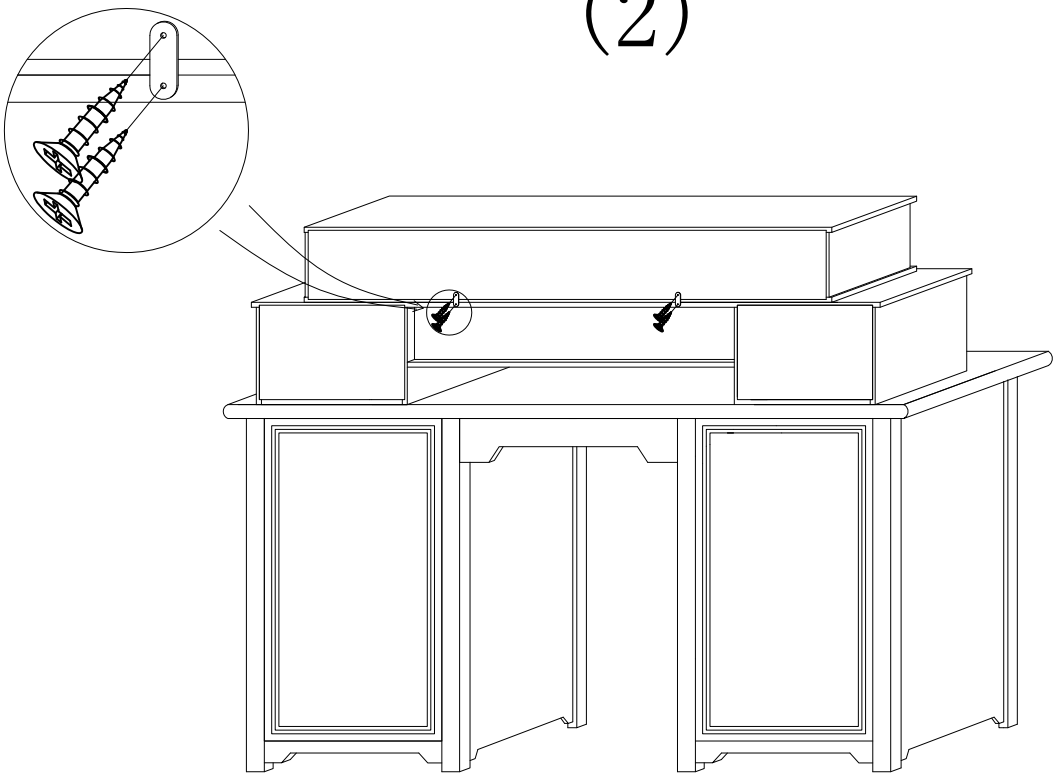

ASSEMBLE THE PLATES.

- ATTACH 2 PLATES USING 4 SCREWS.

(1)

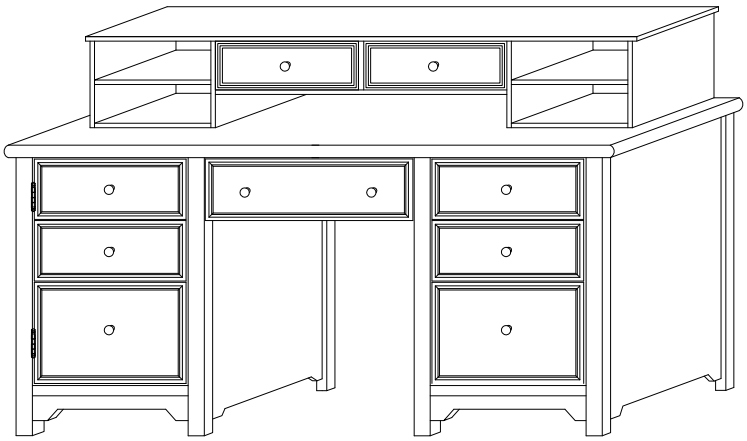

(2)